



## Backsplash Installation Instructions

Since the height of the canopy will be determined by the height of the backsplash, it is very important to install the backsplash before installing the rangehood. The backsplash attaches to the wall using four screws supplied in the hardware package. Four plastic inserts are also provided for sheetrock walls. Use caution when lifting the backsplash to avoid an injury.

1. Determine the proper position for the backsplash and mark the holes on all four corners. The backsplash should be connected to the wall on all four corners. However, it is possible to secure the lower flange between the wall and cabinet base without using the two screws for the bottom corners.
2. Drill the holes using a 5/16" drill bit. Insert the plastic plugs into the holes. Make sure that the plastic plugs are fully inserted into the holes.
3. Mount the backsplash in the proper position and secure, using the screws supplied in the hardware package.
4. Begin the installation of the rangehood.

